




Ford Transit 148 and 148 EXT Floor Kit

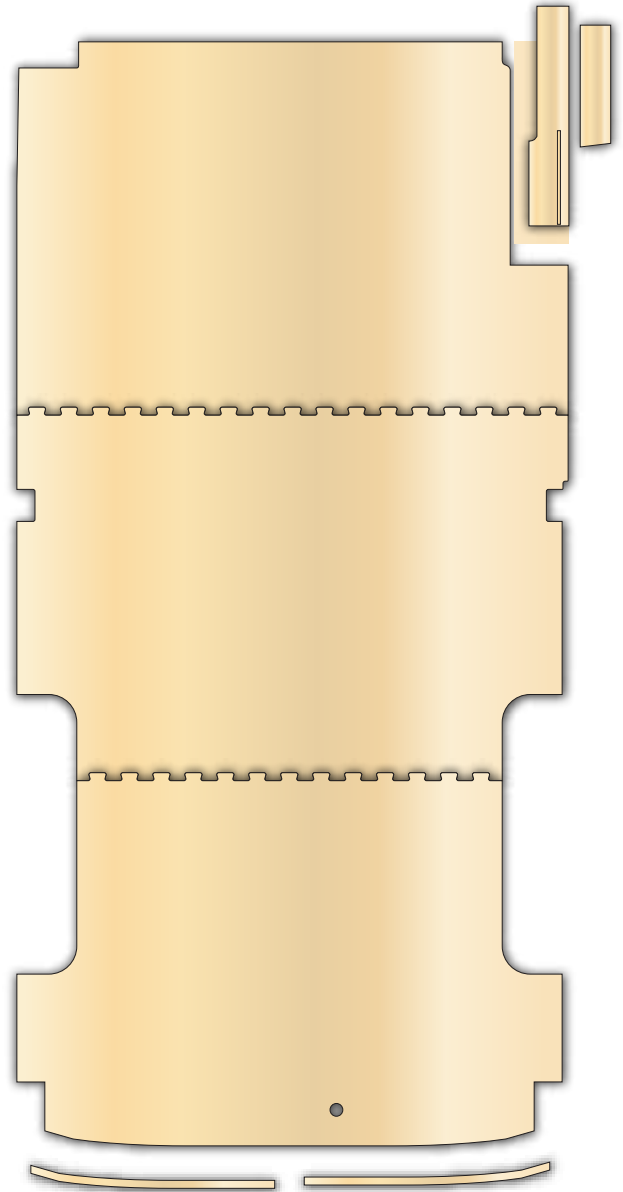


- Exact fit CNC floor system with interlocking seams
- Two door step options for custom fit
- Made from lite poplar plywood to keep build weight down and maintain strength





Floor Install Instructions

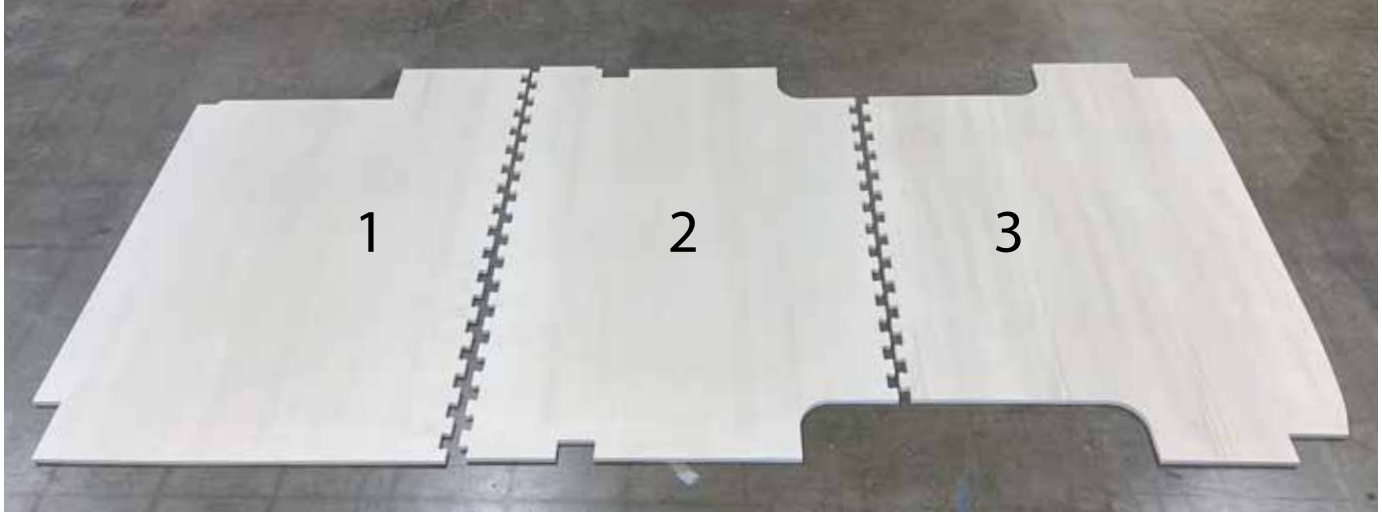

Step 1 : Layout floor pieces on the ground following the pattern you see in the photo, the word bottom should be face down.



Step 2 : Apply wood glue to seams and hammer together with rubber mallet



Step 3 : Allow glue to dry, flip floor over and install rear under support with the provided 8 flat head screws



Step 4 : Now you can flip floor over again and install your floor covering



Step 5 : Get friend to help set floor into van. Set driver side first and then slowly bring the passenger side down as you lower make sure to keep sliding driver side to the wall until floor is flat on van floor



Step 6 : Choose side support based off what type step you have. Then finish with your choice of materials and install side support with the provided 6 rounded head screws

Floor is now installed!