# PROMASTER HANDLE INSTALLATION INSTRUCTIONS:

TOOLS REQUIRED:

#2 PHILLIPS HEAD SCREW DRIVER

PLASTIC PRYING TOOL

17 MM SOCKET


10 MM SOCKET OR WRENCH

T-27 TORX BIT

3/8” DRILL BIT (FORSTNER RECOMMENDED)

MASKING TAPE

SCRAP PIECE OF PLYWOOD
1” x 12”

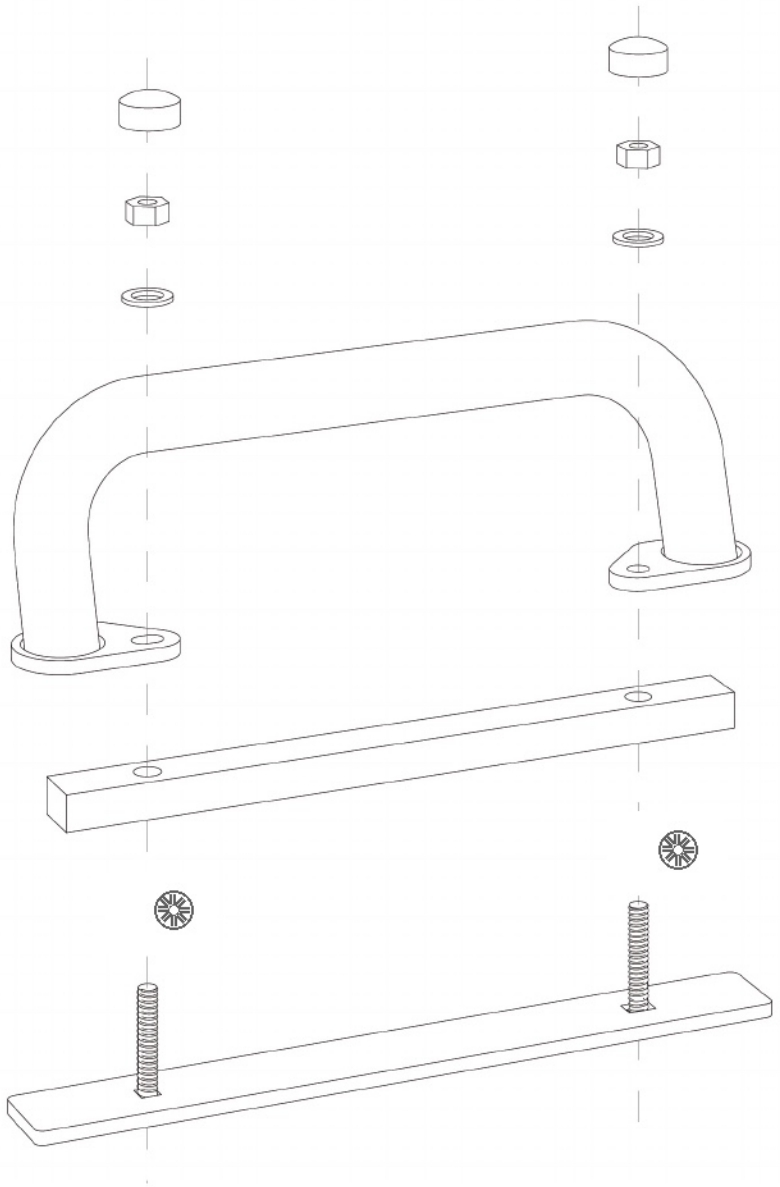

(2) ACORN CAPS

(2) M6 NUTS

(2) WASHERS

(1) HANDLE

(1) PLYWOOD SPACER

(2) STAR THREADED WASHERS

(1) BACKER PLATE


REMOTE
ADVENTURE DESIGN




INSIDE OF PASSENGER DOOR



INSIDE OF SLIDING DOOR

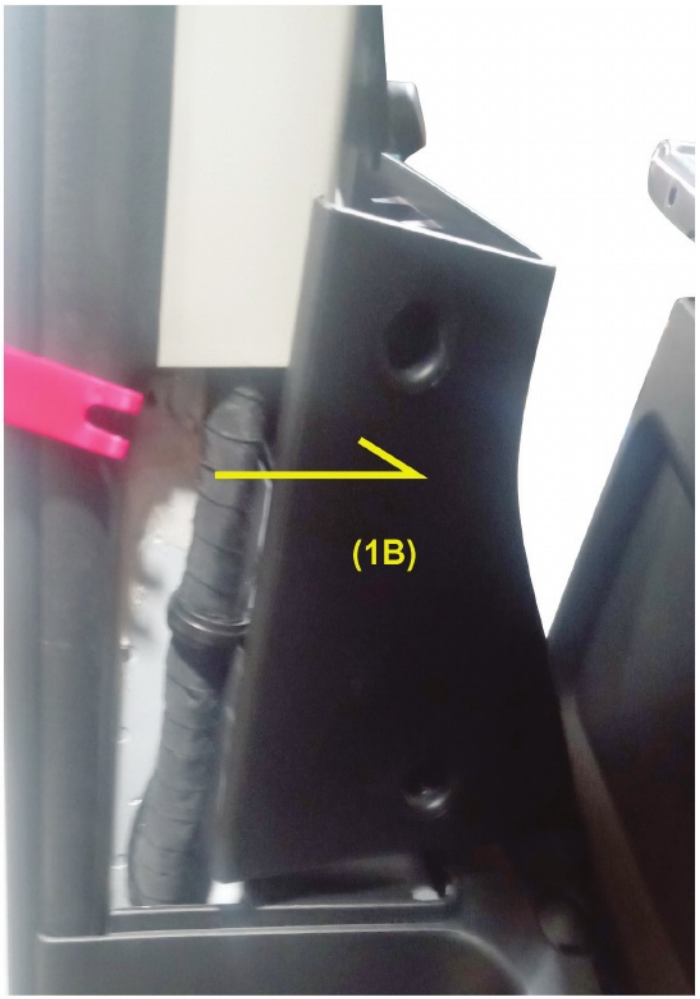



(1): REMOVING THE COLUMN BOTTOM COVER:

(1A): REMOVE THE (5) SCREWS (# 2 PHILLIPS).

(1B) USING A PLASTIC TOOL, REMOVE THE COVER BY PRYING ALONG THE EDGES.

REMOTE
ADVENTURE DESIGN

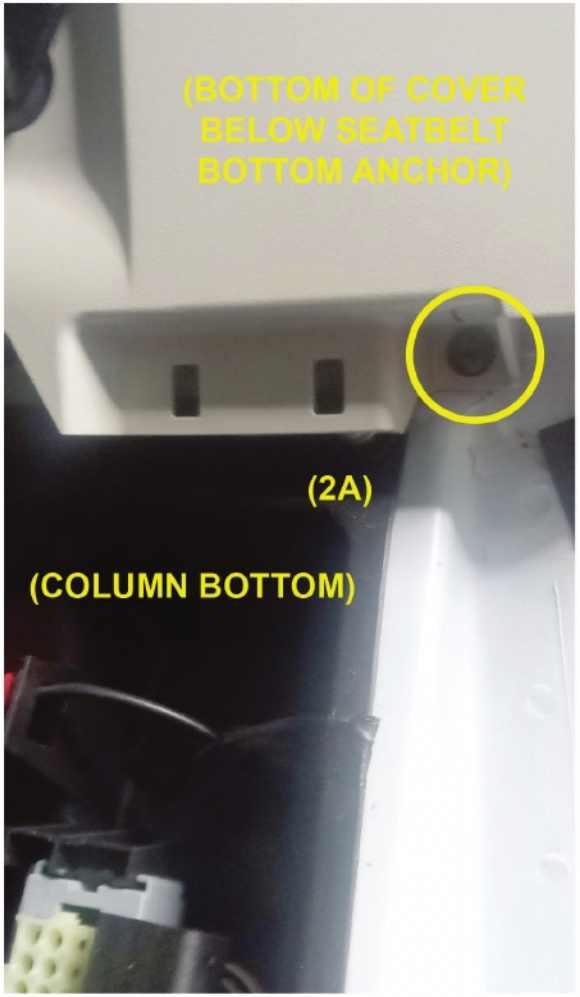








* NOTE *
IF THE VAN HAS A SWIVEL SEAT ON THE PASSNGER SIDE, YOU ONLY NEED TO REMOVE AIR BAG COVER AND STAR-BIT SCREW (2B & 2C). THERE ARE NO SEAT-BELT ATTACHMENTS ON THE COLUMN









(2): REMOVING THE COLUMN TOP COVER:


(2A): REMOVE THE (1) SCREW (# 2 PHILLIPS) AT THE BOTTOM OF THE COVER (BELOW SEATBELT BOTTOM ANCHOR.
(2B): USING PLASTIC TOOL, PRY OFF THE AIRBAG CAP AT TOP OF COLUMN ABOVE SEAT BELT.
(2C): PUSH DOWN ON LEVER UNTIL THE TORX SCREW HEAD IS VISIBLE (T-27), THEN REMOVE SCREW & LEVER CAP.
(2D): USING PLASTIC TOOL, PRY UP ON SEAT BELT COVER & HOLD TO REMOVE NUT (17 MM SOCKET).
(2E): USING PLASTIC TOOL, REMOVE CAP ON BOTTOM OF SEAT BELT ATTACHMENT & REMOVE BOLT (17 MM SOCKET).
* ONCE BOLT IS REMOVED, PRY ALONG THE EDGES OF THE COLUMN COVER WITH A PLASTIC TOOL TO REMOVE *

REMOTE
ADVENTURE DESIGN







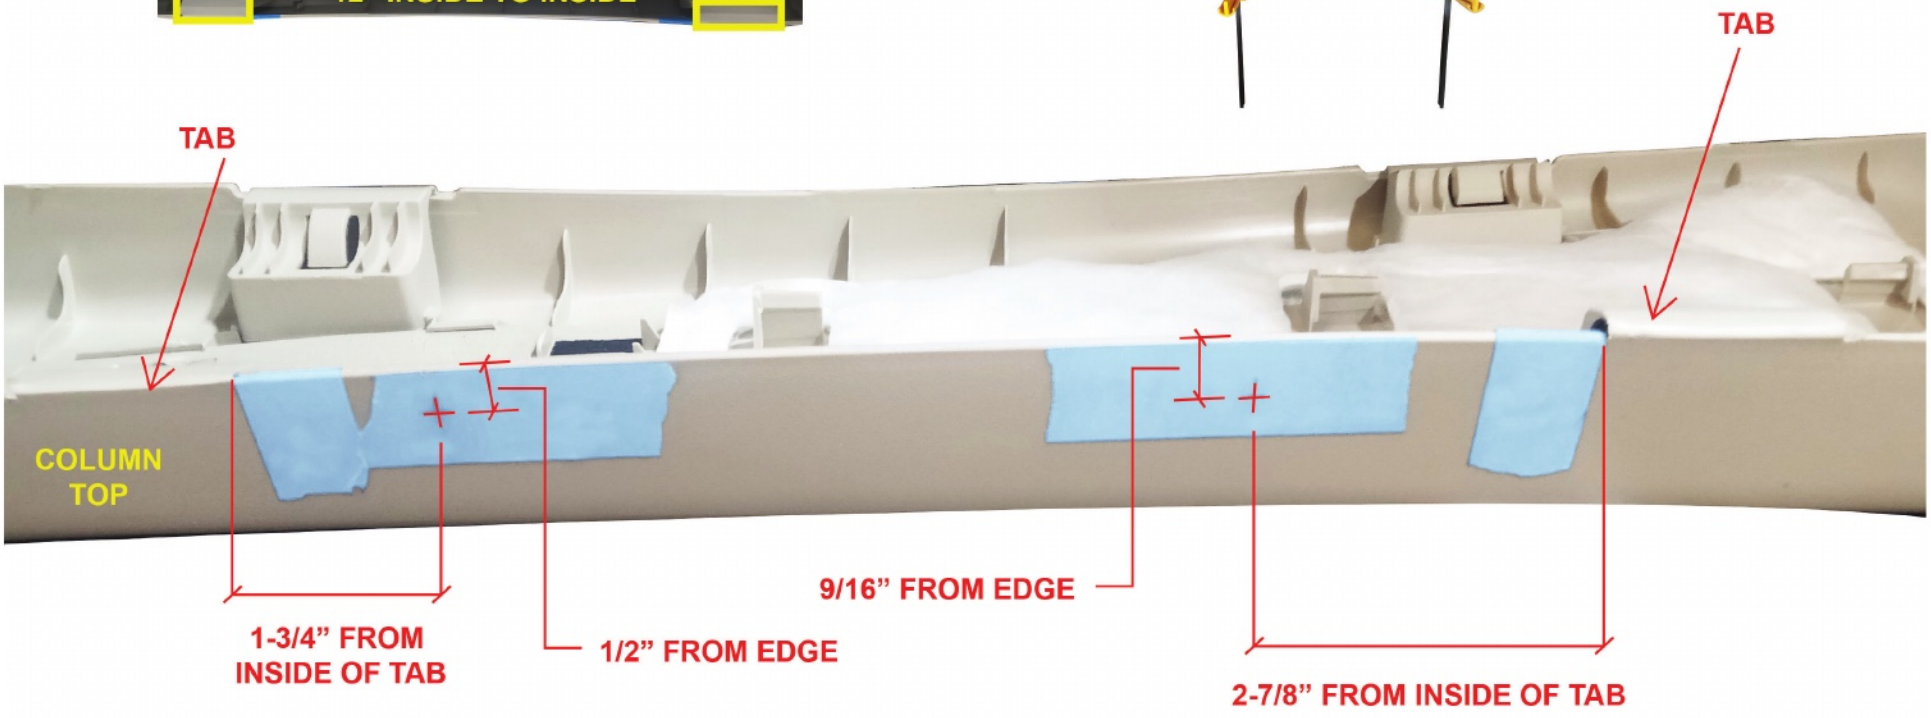


(3): 3/8” DIAMETER DRILLING LOCATIONS ON COLUMN COVER FOR HANDLE:
(3A): USE MASKING TAPE TO MARK FROM INSIDE OF TABS TO THE OUTSIDE OF THE COVER.
(3B): WE RECOMMEND USING A SCRAP PIECE OF PLYWOOD AS A BACKER, CLAMPING IT TO THE COLUMN COVER BEFORE DRILLING.

* RECOMMENDED TO USE A FORSTNER BIT *

REMOTE
ADVENTURE DESIGN






BACKER PLATE



PLYWOOD SPACER

(4): INSTALLING HANDLE BACKER PLATE & SPACER:

(4A): SLIDE THE BACKER PLATE THROUGH THE OPENING AND UP THE COLUMN UNTIL THE THREADED STUDS COME OUT OF THE ROUND HOLES (NOT HEXAGONAL).

(4B): WHILE HOLDING THE BACKER PLATE INSIDE, PRESS THE (2) STAR THREADED WASHERS ONTO THE STUDS UNTIL HAND TIGHT.


(4C): PLACE THE PLYWOOD SPACER OVER THE THREADED STUDS AND THEN ATTACH THE COLUMN PLASTIC TOP COVER.

* SEE NEXT PAGE *

REMOTE
ADVENTURE DESIGN




(4B):

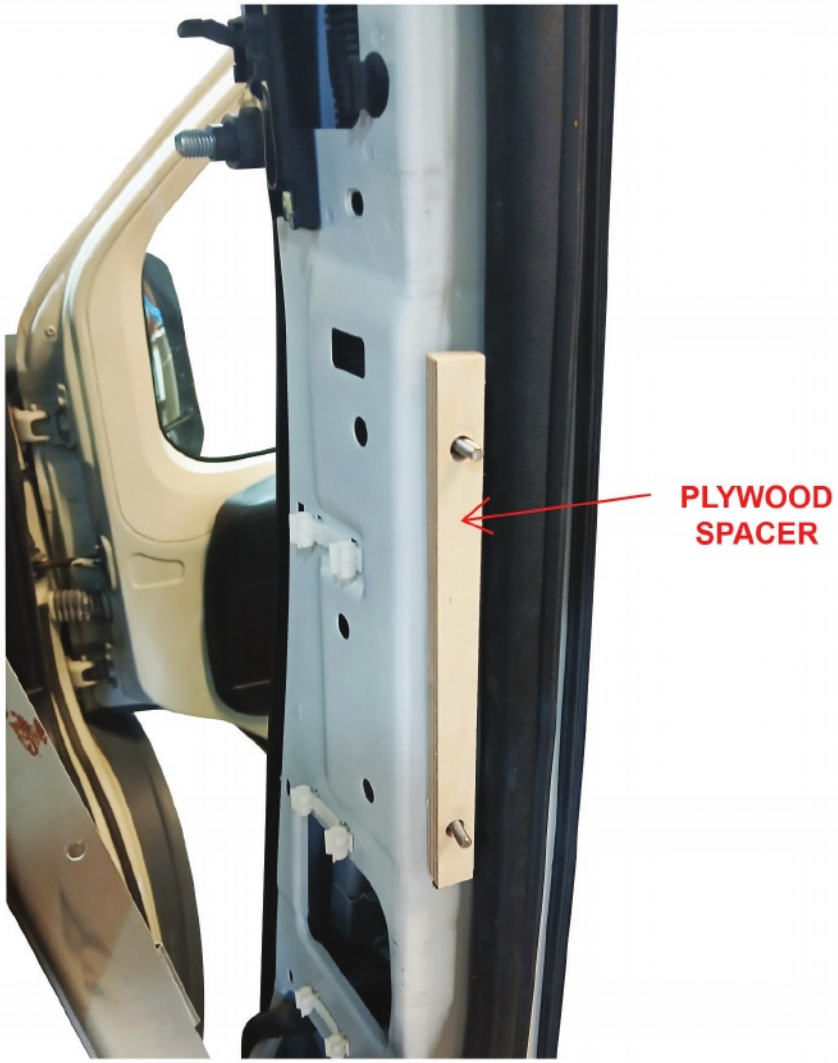


(4C):

REMOTE
ADVENTURE DESIGN



ROUND HOLE
ON TOP

* HANDLE TILTS TOWARDS INSIDE OF VAN

SLOTTED OPENING
ON BOTTOM



(5): INSTALLING THE HANDLE:

(5A): PLACE HANDLE (WITH ROUND HOLE ON TOP) ONTO THE THREADED RODS COMING THROUGH THE COLUMN COVER.
(5B): PLACE (1) WASHER & (1) NUT ON EACH THREADED ROD AND TIGHTEN (10 MM SOCKET OR WRENCH).
(5C): PLACE PLASTIC CAPS OVER NUTS .

REMOTE
ADVENTURE DESIGN