


^> DOMETIC

AC AND VENTILATION

FANTASTIC VENT

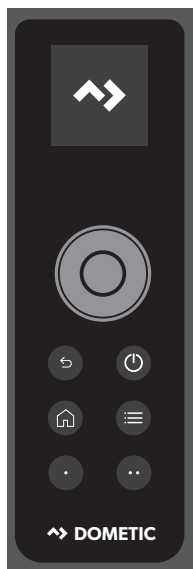

SGR-0

EN	Remote control Operating Manual.....	3
ES	Control remoto Instrucciones de uso.....	26
FR	Télécommande Manuel d'utilisation.....	14

Copyright

© 2026 Dometic Group. The visual appearance of the contents of this manual is protected by copyright and design law. The underlying technical design and the products contained herein may be protected by design, patent or pending patent. The trademarks mentioned in this manual belong to Dometic Sweden AB. All rights are reserved.

Trademark Bluetooth®

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Dometic is under license.

English

1	Important notes.....	3
2	Explanation of symbols.....	3
3	Safety instructions.....	3
4	Scope of delivery.....	3
5	Intended use.....	3
6	Technical description.....	3
7	Installation.....	5
8	Operation.....	5
9	Cleaning.....	12
10	Troubleshooting.....	12
11	Disposal.....	12
12	Warranty.....	12
13	Technical data.....	12
14	Legal.....	13

1 Important notes

Please read these instructions carefully and follow all instructions, guidelines, and warnings included in this product manual in order to ensure that you install, use, and maintain the product properly at all times. These instructions **MUST** stay with this product.

By using the product, you hereby confirm that you have read all instructions, guidelines, and warnings carefully and that you understand and agree to abide by the terms and conditions as set forth herein. You agree to use this product only for the intended purpose and application and in accordance with the instructions, guidelines, and warnings as set forth in this product manual as well as in accordance with all applicable laws and regulations. A failure to read and follow the instructions and warnings set forth herein may result in an injury to yourself and others, damage to your product or damage to other property in the vicinity. This product manual, including the instructions, guidelines, and warnings, and related documentation, may be subject to changes and updates. For up-to-date product information, please visit documents.domestic.com.

2 Explanation of symbols

A signal word will identify safety messages and property damage messages, and also will indicate the degree or level of hazard seriousness.



WARNING!

- > Indicates a hazardous situation that, if not avoided, could result in death or serious injury.



NOTICE!

- > Indicates a situation that, if not avoided, could result in property damage.



NOTE Supplementary information for operating the product.

3 Safety instructions



WARNING! Risk of injury and/or device damage

- > Do not expose the product to heat or fire. Do not store in direct sunlight.
- > Do not use or charge the product if it is damaged. In the event of battery fluid leakage, keep away from skin and eyes. Wash any affected area with large amounts of water and seek medical attention.
- > Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- > Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burn.

4 Scope of delivery

Description	Quantity
Remote control	1
Cable	1
Wall cradle	1
Peel-and-stick mounting tab	1
Operating manual	1

5 Intended use

The remote control is intended to be used for wireless operation and control of the compatible RV vent fan using Bluetooth technology.


6 Technical description

The remote control can be used to control the following Fan-Tastic Vent 2 models:

- FA series: FA75, FA95
- FV series: FV60, FV70, FV90, FV95

Additional models may be added in the future.

6.1 Buttons

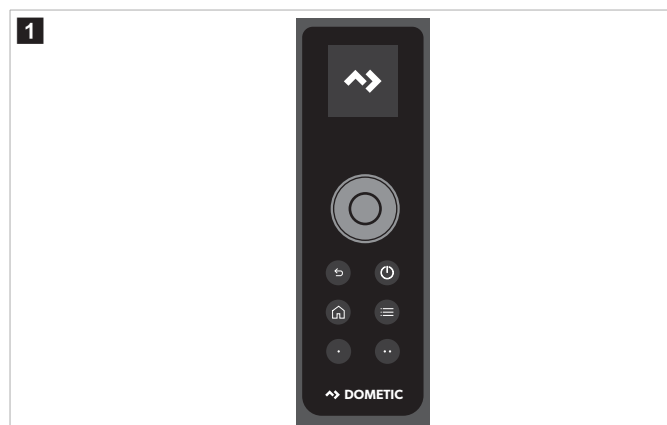

But-ton	Name	Description
	Display screen	Displays the current status and settings.
	Navigation pad (Up, Down, Left, Right)	Navigates menus and adjust settings.
	Enter button	Confirms the selections or save changes.
	Back button	Returns to the previous screen.
	Power button	Turns the vent fan on or off.
	Home button	Returns to the home page.
	Menu button	Opens the main menu to change settings and parameters such as display units, backlight brightness, etc.




Shortcut button

Provides quick access to frequently used product settings.



6.2 Home page

The home page shows the basic status and information about how your product is operating.

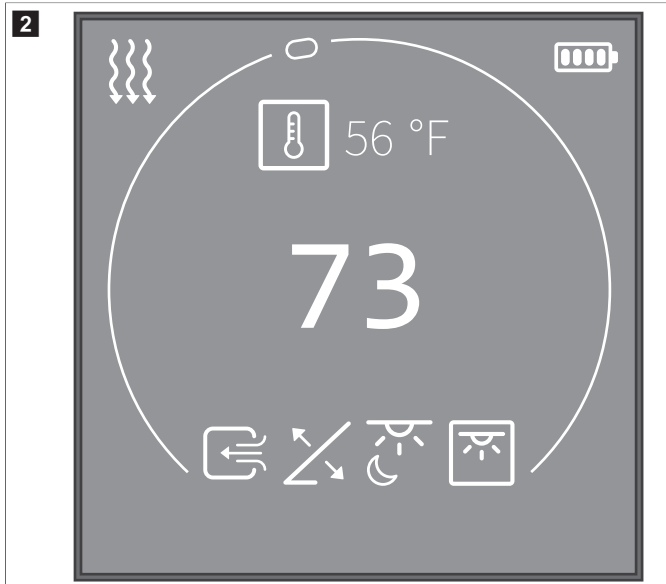


Icon	Description
	Product currently being controlled by the remote control
	Battery status
	Current fan mode (Auto/Thermostat mode)
56 °F	Current temperature
73	Current fan speed
	Air intake mode
	Night light
	Dome is open
	Light is on

Navigating to the features menu

- > From the home page, press the enter button to enter the features menu where you can change the fan settings and parameters.


6.3 Features menu

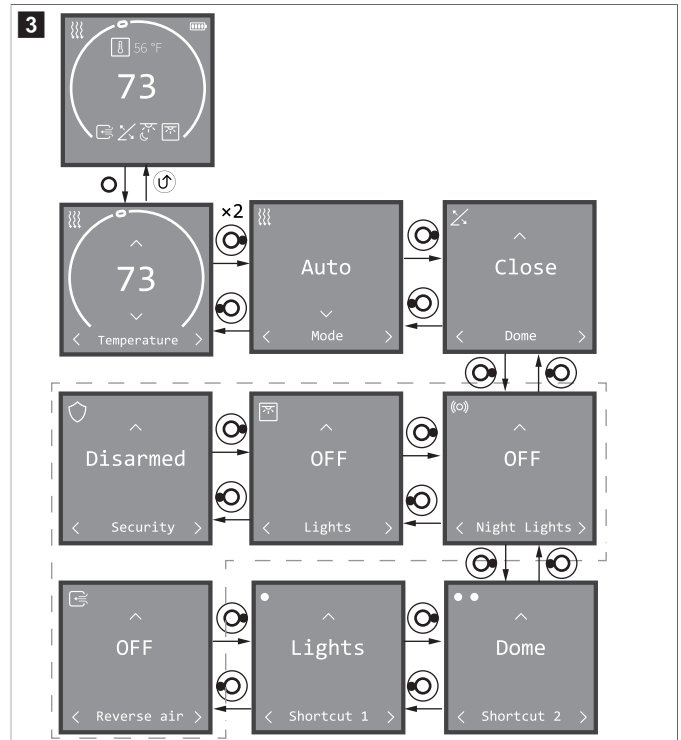

Menu	Menu name	Description
	Mode	Switches between Manual1 mode and Auto mode. See Setting the fan mode on page 6.
	Dome	Opens or closes the dome. See Opening or closing the dome on page 8.
	Night lights	Turns the night lights on or off. See Turning on or off the night lights on page 8.
	Lights	Turns the lights on to 100%, 50%, or off. See Controlling the LED light on page 8.
	Security	Arms or disarms the security mode. See Activating the security mode on page 8.
	Reverse air	Turns the reverse air on and off. See Changing the airflow direction on page 9.

Menu	Menu name	Description
	Shortcut	Selects from: Mode, Dome, Night Lights, Lights, Security, and Reverse Air. See Saving settings as a shortcut on page 9.
		


6.4 Main menu

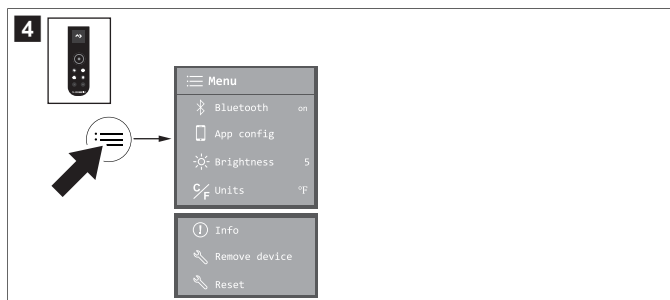

Sub menu	Description
Bluetooth	Configure and manage Bluetooth connections between the remote control and the fan. See Connecting the remote control to the fan on page 9.
App config	Connect the remote control to the app on your phone. See Connecting the remote control to the app on page 9.
Brightness	Adjust the remote's backlight brightness: Auto mode: Automatically adjust brightness based on ambient light conditions. Manual mode: Select from brightness levels 1 ... 5. See Adjusting the brightness of the backlight on the remote control on page 10.
Units	Select the temperature display unit (°C or °F) for both the fan and the remote control. See Setting the temperature display units on page 10.
Info	View information about your remote control, including model number and software version. See Viewing system information on page 10.
Remove device	Remove a fan from the remote control. See Removing a device on page 11.
Reset	Restore the remote control to factory settings. All custom settings and fan pairings will be erased. See Resetting Bluetooth on page 11 and Resetting to factory default on page 11.

7 Installation

This section describes how to install the remote control cradle.

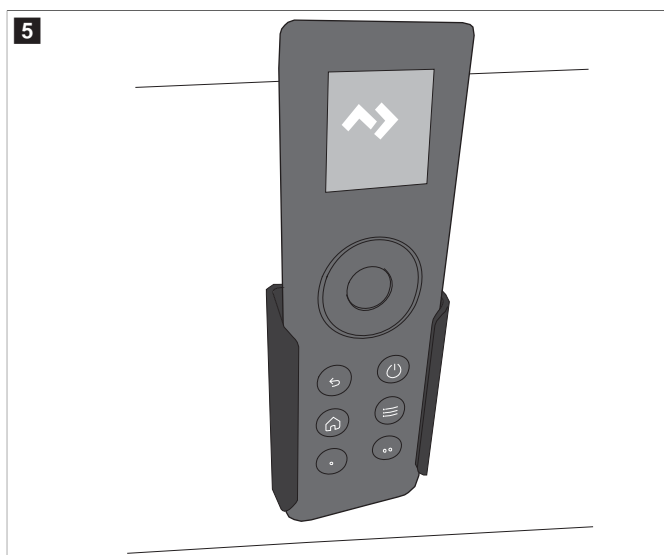

- Attach the mounting tab to the wall cradle (if needed):
 - Peel off the protective film from one side of the mounting tab.
 - Attach the exposed adhesive side to the back of the wall cradle, ensuring the tab is fully hidden behind the cradle.
- Prepare the mounting surface:
 - Thoroughly clean the surface where the wall cradle will be mounted.
 - Remove any dirt, grease, or debris that could interfere with adhesion.
 - After cleaning, wipe the area with rubbing alcohol to ensure maximum cleanliness.
- Mount the cradle:
 - Peel off the protective film from the other side of the mounting tab.
 - Firmly press the cradle onto the prepared surface.
 - Hold the cradle in place for at least 10 s to ensure a secure bond.



NOTE Ensure the temperature inside the coach is above 16°C during installation for proper adhesion.

8 Operation

8.1 Using the remote control to control the fan

8.1.1 Before initial use

Before using the remote control for the first time, check the battery status. If required, charge the remote control (Charging the remote control on page 11).

Observe the following tips when using the remote control:


- To turn the remote control on and off, long press the power button  for 3 s.
- Upon pressing a button on the remote control, the corresponding settings and values are instantaneously transmitted to the vent fan.
- After a period of inactivity, the remote control will go into sleep mode. Press any button to wake the remote control. There may be times when the remote control wakes up and takes a brief moment to reconnect to the product. Wait until the home page indicates connection to the fan before trying to send commands.
- The vent fan confirms the receipt of data with a vibration pulse.

8.1.2 Turning the remote control on or off

- To turn the remote control on or off, long press the power button  for 3 s.

8.1.3 Connecting the remote control to the fan

- Put the fan in pairing mode via one of the following methods:
 - Turn the fan off, then back on again.
 - Long press   simultaneously on the vent's control panel.
- Press the menu button  on the remote control to open the main menu (1 in  Fig. 6 on page 6).

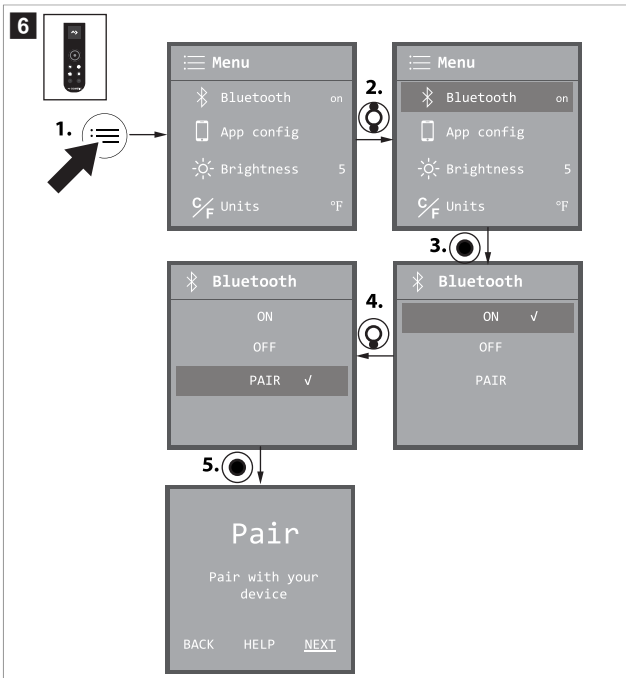

- Use the up or down button on the navigation pad to scroll to the **Bluetooth** menu (2 in  Fig. 6 on page 6).
- Press the enter button  to open the **Bluetooth** menu (3 in  Fig. 6 on page 6).
- Use the up or down button on the navigation pad to select **Pair** (4 in  Fig. 6 on page 6).
- Follow the on-screen instructions to connect the remote control to the desired fan (5 in  Fig. 6 on page 6).

8.1.4 Turning the fan on or off


Turning the fan on



NOTE Ensure the remote control is turned on (see Turning the remote control on or off on page 6).

- Press the power button  on the remote control.
- ✓ The fan will turn on and resume its last operating mode and settings.

Turning the fan off

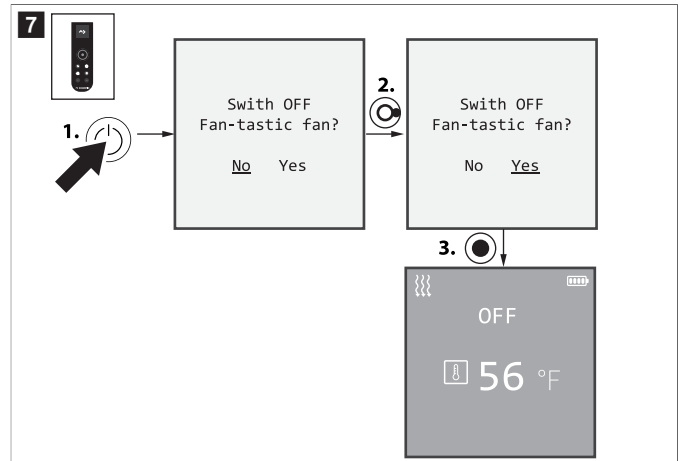


- Press the power button  on the remote control (1 in  Fig. 7 on page 6).
- Use the left or right button on the navigation pad to navigate to the **Yes** option (2 in  Fig. 7 on page 6).
- Press the enter button  to confirm your selection (3 in  Fig. 7 on page 6).
- ✓ The fan will be turned off.

8.1.5 Switching between controlled fans

When your remote control is connected to multiple fans, you can switch between them to control a specific unit.

- From the home page, press the left and right button on the navigation pad to switch between fans you want to control.

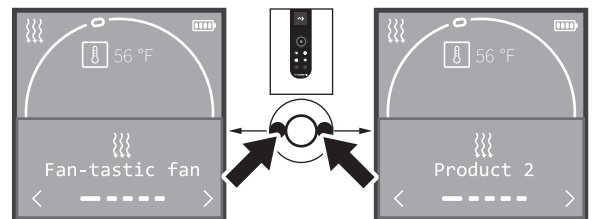


- Press the enter button  to confirm your selection.

8.1.6 Setting the fan mode

You can set the fan to operate in either auto mode or manual mode, depending on your comfort preferences and desired control level.

Fan mode	Description
Auto (thermostat) mode	The fan automatically adjusts its speed based on the difference between the current room temperature and your desired (setpoint) temperature. To maintain the set temperature, the fan may speed up, slow down, or stop as needed.
Manual mode	The fan runs continuously at a fixed speed you select. You can choose from 10 speed levels (1 ... 10).

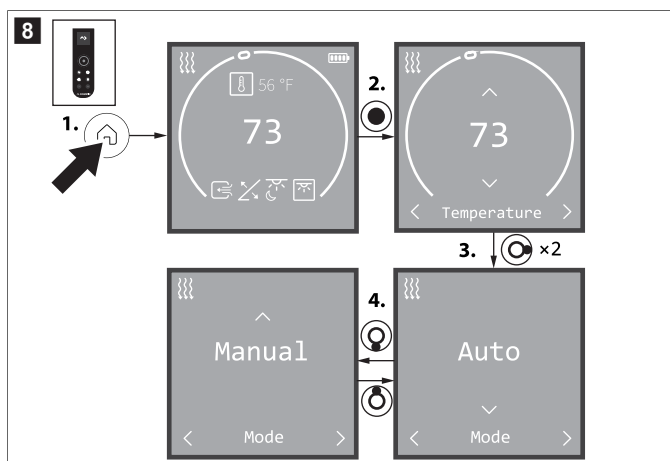

1. From the home page, press the enter button to access the features menu (1 in Fig. 8 on page 7).
2. Use the left or right button on the navigation pad to scroll to the **Mode** menu (2 in Fig. 8 on page 7).
3. Use the up or down button on the navigation pad to toggle between auto mode and manual mode (3 in Fig. 8 on page 7).
4. Press the enter button to confirm your selection.

8.1.7 Setting the temperature (Auto mode)




NOTE

Ensure the fan is in auto mode before adjusting the temperature (see Setting the fan mode on page 6).

Quick adjustment from the home page


1. From the home page, press the up or down button on the navigation pad to increase or decrease the target temperature (2 in Fig. 9 on page 7).

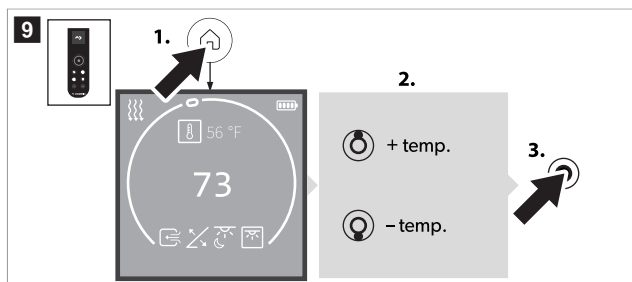

2. Press the enter button to confirm your selection.

Using the features menu

1. From the home page, press the enter button to open the features menu.

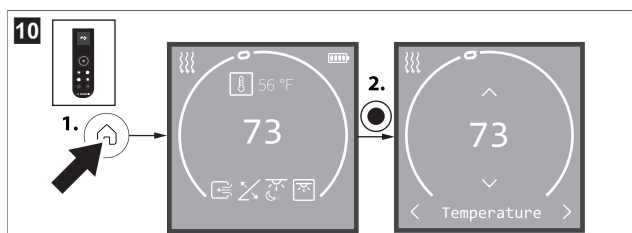

2. Use the left or right button on the navigation pad to navigate to the temperature setting.
3. Use the up or down button to increase or decrease the target temperature.
4. Press the enter button to confirm your selection.

8.1.8 Setting the fan speed (Manual mode)




NOTE

Ensure the fan is in manual mode before adjusting fan speed (see Setting the fan mode on page 6).

Quick adjustment from the home page


1. From the home page, press the up or down button on the navigation pad to increase or decrease the fan speed level (2 in Fig. 11 on page 7).

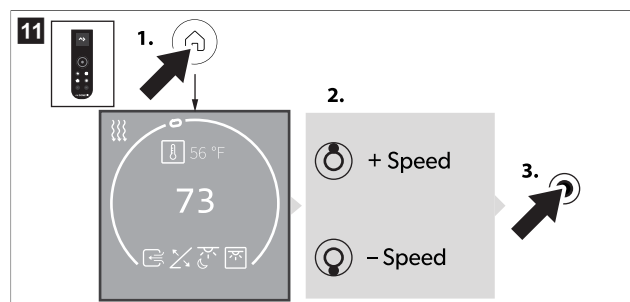

2. Press the enter button to confirm your selection.


Using the features menu

1. From the home page, press the enter button to open the features menu (2 in Fig. 12 on page 7).

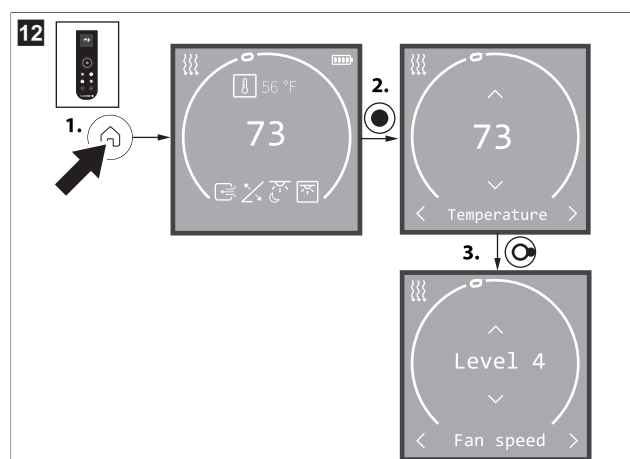


2. Use the left or right button on the navigation pad to scroll to the fan speed setting (3 in Fig. 12 on page 7).
3. Use the up or down button to increase or decrease the speed to your desired level (range: 1 ... 10).
4. Press the enter button to confirm your selection.

8.1.9 Opening or closing the dome

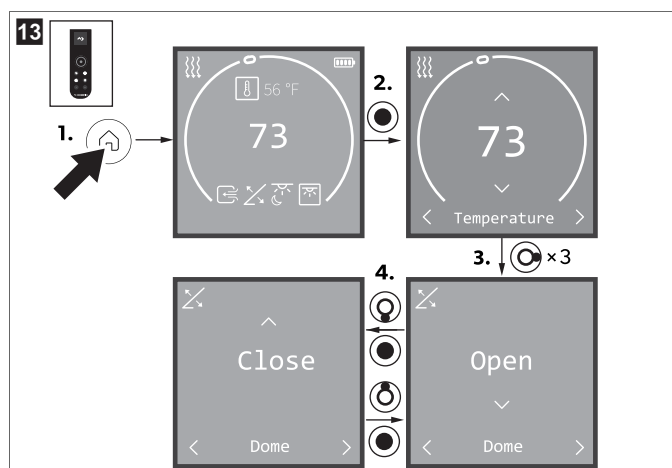


1. From the Home page, press the enter button to open the features menu (2 in Fig. 13 on page 8).
2. Press the left or right button multiple times on the navigation pad to scroll to the **Dome** menu (3 in Fig. 13 on page 8).
3. Press the up or down button on the navigation pad to open or close the dome (4 in Fig. 13 on page 8).
4. Press the enter button to confirm your selection.

8.1.10 Turning on or off the night lights

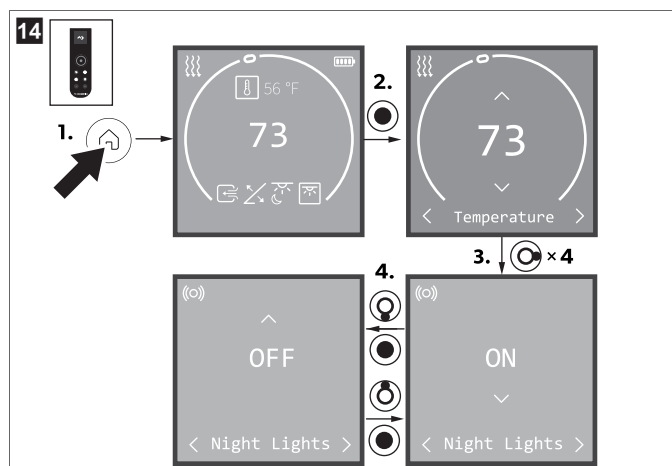

1. From the home page, press the enter button to open the features menu (2 in Fig. 14 on page 8).
2. Press the left or right button multiple times on the navigation pad to scroll to the **Night Lights** menu (3 in Fig. 14 on page 8).
3. Press the up or down button on the navigation pad to turn on or off the night lights (4 in Fig. 14 on page 8).
4. Press the enter button to confirm your selection.

8.1.11 Controlling the LED light

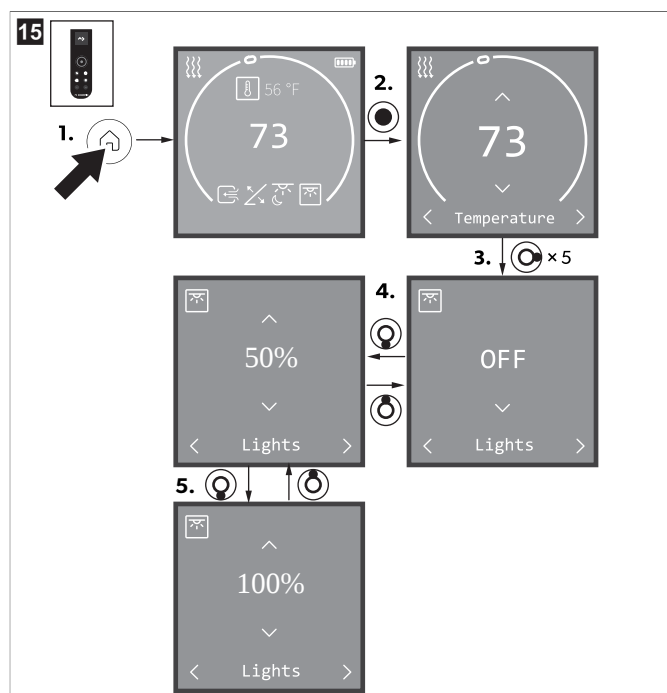


1. From the home page, press the enter button to open the features menu (2 in Fig. 15 on page 8).
2. Press the left or right button multiple times on the navigation pad to scroll to the **Lights** menu (3 in Fig. 15 on page 8).
3. Press the up or down button on the navigation pad to turn the LED light on 100%, 50%, or off (4 and 5 in Fig. 15 on page 8).
4. Press the enter button to confirm your selection.

8.1.12 Activating the security mode

NOTE Security mode is available only on Fan-Tastic Vent 2 Platinum models.

Security mode allows your fan to function as a basic motion-detection alert system while you're away from your RV.

- When security mode is enabled and armed, the system monitors for motion inside your RV.
- If motion is detected:
 - The LED lights will flash.
 - The fan will emit haptic feedback (vibration).
 - Alerts will remain active until manually acknowledged via the mobile app or remote control.
- If the fan is connected to WLAN, a push notification will be sent to your paired smartphone, alerting you to the detected motion.

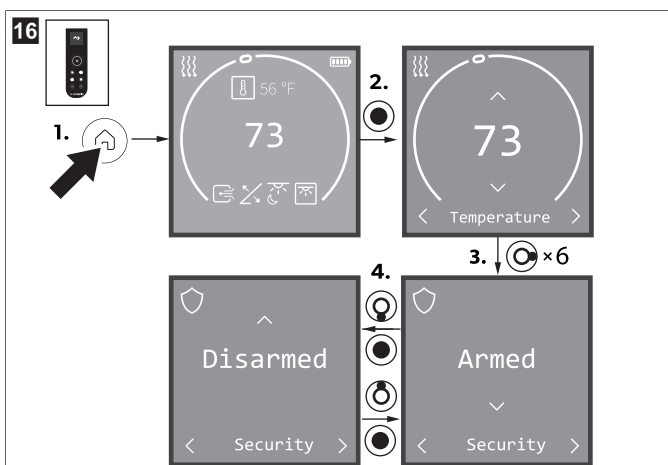


1. From the home page, press the enter button to open the features menu (2 in Fig. 16 on page 9).
2. Use the left or right button on the navigation pad to scroll to the **Security** menu (3 in Fig. 16 on page 9).
3. Press the up or down button on the navigation pad activate or deactivate the security mode (4 in Fig. 16 on page 9).
4. Press the enter button to confirm your selection.
Once armed, there is a 90 s delay before security mode becomes active. This allows you to exit your RV without triggering an alert.

8.1.13 Changing the airflow direction

This function is only available on vents equipped with a fan blade motor-reversing option.

Airflow modes:

- **Reverse air OFF = Exhaust Mode (Default):** Expels air from the RV interior through the roof.
- **Reverse air ON = Air Intake Mode:** Draws air into the RV interior.

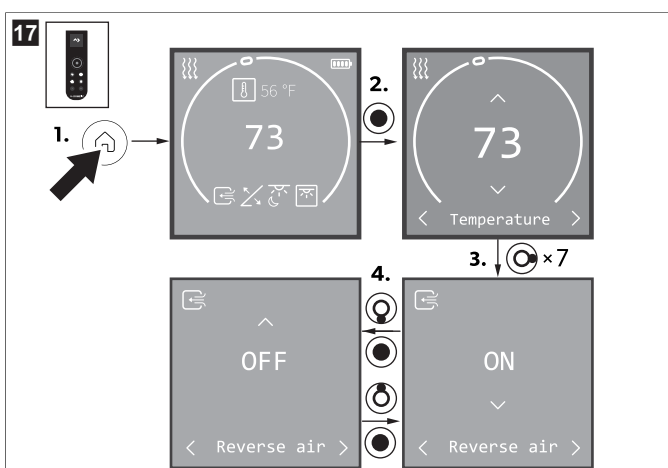


1. From the home page, press the enter button to open the features menu (2 in Fig. 17 on page 9).
2. Press the left or right button on the navigation pad to scroll to the **Reverse air** menu (3 in Fig. 17 on page 9).
3. Press the up or down button on the navigation pad to turn on or off the reverse air (4 in Fig. 17 on page 9).
4. Press the enter button to confirm your selection.



NOTE The fan blades will come to a complete stop before changing airflow direction.

8.1.14 Saving settings as a shortcut

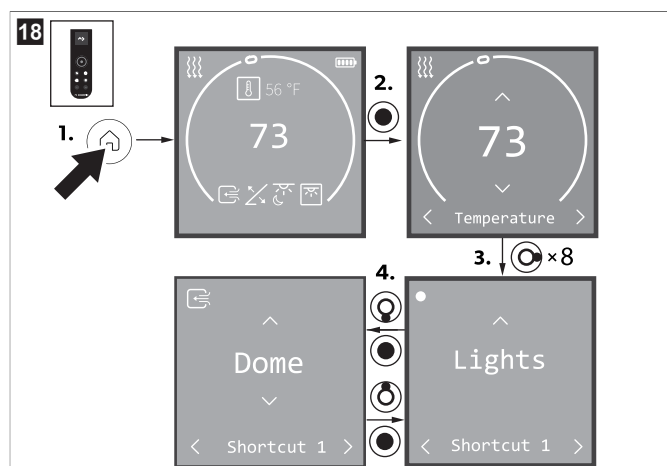

1. From the home page, press the enter button to open the features menu (2 in Fig. 18 on page 9).
2. Use the left or right button on the navigation pad to scroll to the desired **Shortcut** menu (shortcut 1 or 2) (3 in Fig. 18 on page 9).
3. Press the up or down button on the navigation pad to scroll to the settings you want to save as a shortcut (4 in Fig. 18 on page 9).
4. Press the enter button to save the settings as a shortcut.

8.2 Setting up the remote control

8.2.1 Connecting the remote control to the fan


For more information, see "Connecting the remote control to the fan on page 6".

8.2.2 Connecting the remote control to the app

The remote control can connect to the mobile app to receive over-the-air (OTA) software updates.



NOTE Ensure your remote control and mobile device are within Bluetooth range during the connection process.

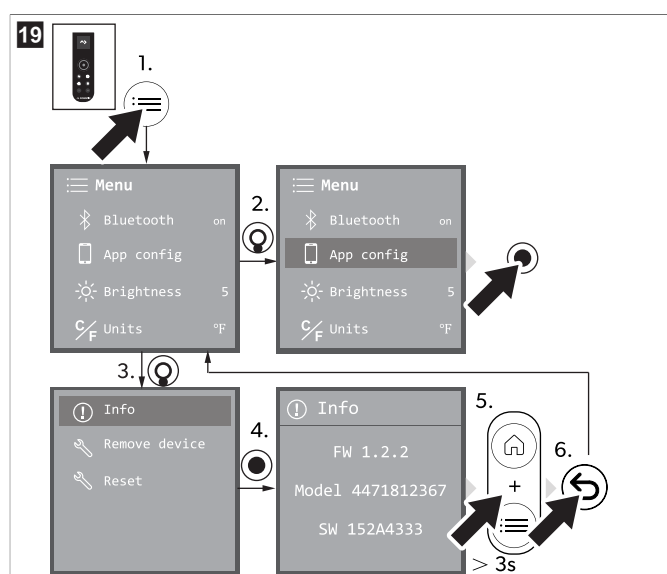

1. Download the Dometic Power app.




Scan QR code or follow the link
qr.dometic.com/bfsAlm.

2. Press the menu button on your remote control to open the main menu (1 in Fig. 19 on page 9).
3. Use the up or down button on the navigation pad to scroll to the **App config** settings (2 in Fig. 19 on page 9)
4. If the App config setting is not visible, proceed as follows:
 - a) From the main menu, use the up or down button on the navigation pad to scroll to the **Info** settings (3 in Fig. 19 on page 9).
 - b) Press the enter button to open the **Info** settings (4 in Fig. 19 on page 9).
 - c) While on the **Info** settings, long press the home and menu buttons simultaneously for 3 s (5 in Fig. 19 on page 9).
 - d) Press the back button to return to the main menu (6 in Fig. 19 on page 9).
 - e) Use the up or down button on the navigation pad to scroll to the **App config** settings (2 in Fig. 19 on page 9).
5. Press the enter button to open the **App config** settings.
6. Press the enter button again to begin the connection process.

8.2.3 Adjusting the brightness of the backlight on the remote control

The remote's backlight offers manual and automatic brightness control:


- Manual levels: 1 (dim) to 5 (bright)
- Auto mode: Adjust brightness dynamically based on ambient light
- Default setting: Backlight off

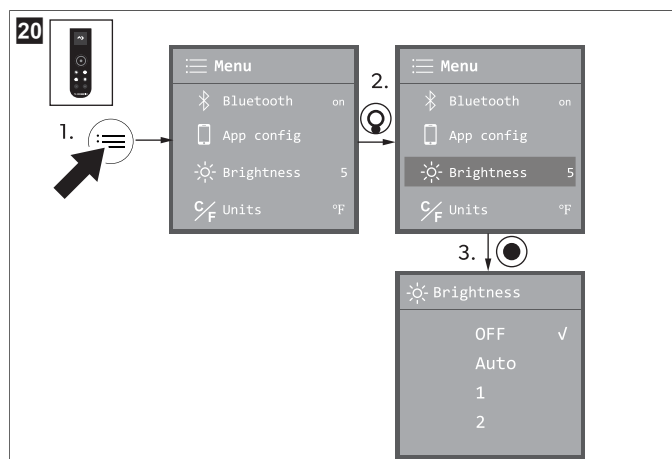

1. From the home page, press the menu button to enter the main menu (1 in Fig. 20 on page 10).
2. Use the up or down button on the navigation pad to scroll to the **Brightness** settings (2 in Fig. 20 on page 10).
3. Press the enter button to open the **Brightness** settings (3 in Fig. 20 on page 10).
4. Use the up or down button on the navigation pad to select the desired brightness level.
5. Press the enter button to confirm your selection.


8.2.4 Setting the temperature display units

You can configure the temperature display units on the remote control to either Celsius (°C) or Fahrenheit (°F).

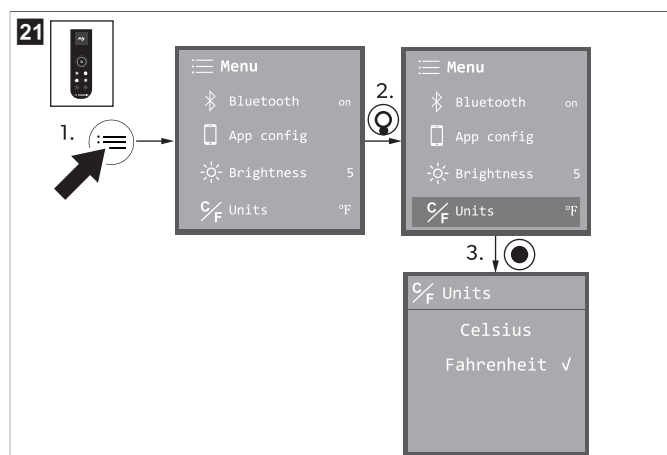


1. Press the menu button to enter the main menu (1 in Fig. 21 on page 10).
2. Use the up or down button on the navigation pad to scroll to the **Units** settings (2 in Fig. 21 on page 10).
3. Press the enter button to open the **Units** settings (3 in Fig. 21 on page 10).
4. Use the up or down button on the navigation pad to select the desired temperature display units.
5. Press the enter button to confirm your selection.
 - ✓ A checkmark will appear next to the current selected unit to indicate your selection.

8.2.5 Viewing system information

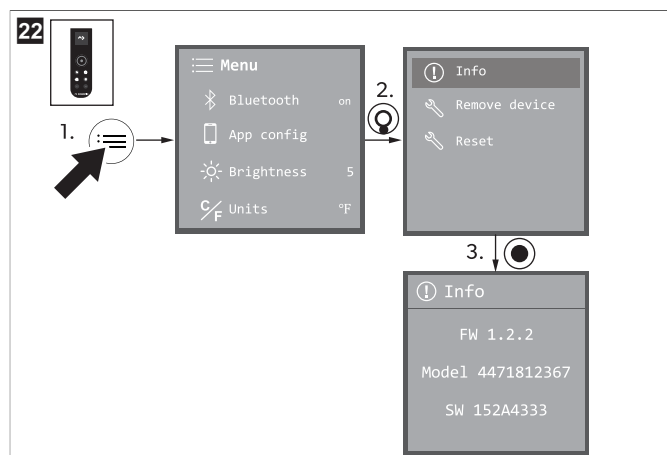

1. Press the menu button on your remote control to open the main menu (1 in Fig. 22 on page 10).
2. Use the up or down button on the navigation pad to scroll to the **Info** settings (2 in Fig. 22 on page 10).
3. Press the enter button to open the **Info** settings (3 in Fig. 22 on page 10).
- ✓ The following system information will be displayed:
 - Remote control model
 - Software version
 - Serial number


8.2.6 Removing a device

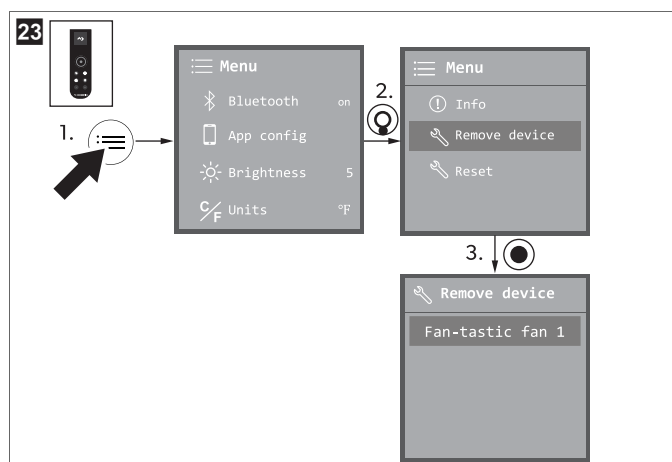

1. Press the menu button (≡) on your remote control to open the main menu (1 in Fig. 23 on page 11).
2. Use the up or down button on the navigation pad to scroll to the **Remove device** settings (2 in Fig. 23 on page 11).
3. Press the enter button (○) to open the **Remove device** settings (3 in Fig. 23 on page 11).
 - ✓ A list of devices currently paired to the remote control will appear.
4. Use the up or down button on the navigation pad to select the device you wish to remove.
5. Press the enter button (○) to confirm your selection.
 - ✓ A pop-up screen will appear asking you to acknowledge the device removal.
6. Use the right or left button on the navigation pad to choose Yes.
 - ✓ A confirmation message will appear, notifying you that the chosen device has been successfully removed.

8.2.7 Resetting Bluetooth

To quickly remove multiple paired devices from the remote control, use the Bluetooth reset function.

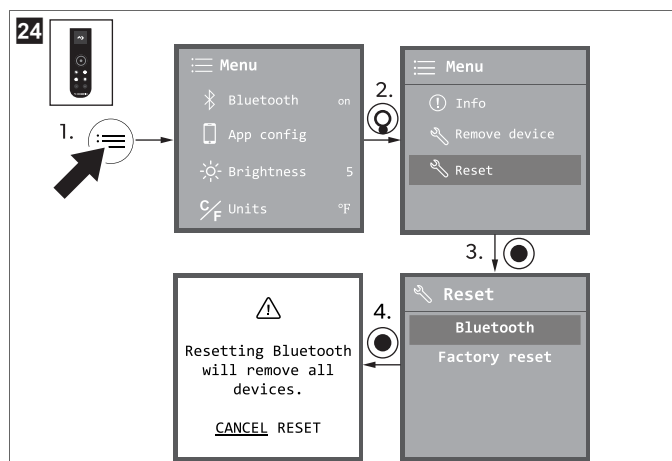


1. Press the menu button (≡) on your remote control to open the main menu (1 in Fig. 24 on page 11).
2. Use the up or down button on the navigation pad to scroll to the **Reset** settings (2 in Fig. 24 on page 11).
3. Press the enter button (○) to open the **Reset** menu (3 in Fig. 24 on page 11).
4. Use the up or down button on the navigation pad to select Bluetooth.

5. Press the enter button (○) to open the Bluetooth settings (4 in Fig. 24 on page 11).
6. Use the left or right button on the navigation pad to select the reset option.
7. Press the enter button (○) to confirm your selection.
 - ✓ A pop-up notification will appear, indicating the Bluetooth reset is completed.

8.2.8 Resetting to factory default

You can reset the remote control to its original factory settings.

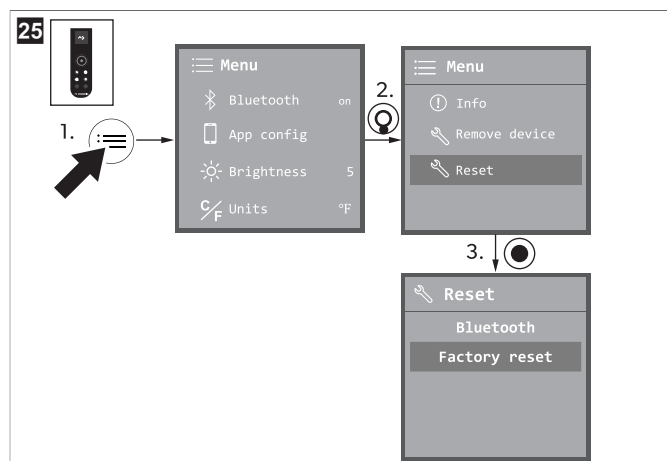

1. Press the menu button (≡) on the remote control (1 in Fig. 24 on page 11).
2. Use the up or down button on the navigation pad to scroll to the **Reset** settings (2 in Fig. 24 on page 11).
3. Press the enter button (○) to open the **Reset** settings (3 in Fig. 24 on page 11).
4. Use the up or down button on the navigation pad to select **Factory Reset** (4 in Fig. 24 on page 11).
5. Press the enter button (○) to confirm your selection.
6. Use the left or right button on the navigation pad to choose **Yes**.
7. Press the enter button (○) to confirm your selection.
 - ✓ A confirmation message will appear, notifying you that the factory reset has been completed.

8.3 Charging the remote control



NOTE

When the remote control's battery is too low, a pop-up message will appear on your screen, prompting you to charge the device. The remote control will resume normal operation once the battery has gained sufficient charge.



NOTE When the remote control battery becomes low, the device may enter a power-saving mode and stop updating the display. In this state, the remote control may still be charging, but the screen will not indicate the charging status.

To recover the remote control, perform the following:

1. Connect the charger and allow the remote control to charge for at least 15 min.
2. After 15 min, press and hold the power button (⏻) for 3 s to wake the remote control.

Once the remote control wakes up, the display will resume normal operation and the charging status will be shown.

Use only the 3 ft power cable supplied with your remote control. Using third-party cables may damage the remote and void your warranty.

1. Plug one end of the power cable into the charging port on the remote control.
2. Plug the other end of the power cable to a 5 V charger or a USB outlet.

9 Cleaning



NOTICE! Product damage

- > Do not spray water directly on the display.
- > Do not use solvents for cleaning.
- > Clean the display with a dry soft cloth, as needed.

10 Troubleshooting

Problem	Possible cause	Suggested remedy
The remote control cannot set the fan.	The remote control is not close enough to the fan.	Move closer to the fan. Point the remote control at the vent fan's display.
	The remote control battery is depleted.	Charge the remote control using the provided power cable.
	The remote control batteries are dead.	Charge the remote control with the provided power cable.
	The remote control software is out of date.	Update the remote control software via the mobile app.
The remote screen is frozen.	The remote control is asleep.	> Press the power button to wake up the remote control. > If the power button (⏻) does not work, press the Main Menu and Short Cut 2 button simultaneously to perform a reset. > Update the remote control software via the mobile app.
The battery won't charge.	The remote control is too hot.	Allow the remote control to cool to room temperature, then plug in the charger.
	The remote control is hibernating.	When the remote control is in hibernation mode, the

Problem	Possible cause	Suggested remedy
		display shows nothing. To wake the remote control: 1. Connect it to a charger and allow it to charge for at least 15 min. 2. Press and hold the power button (⏻) for 3 s. Once the remote control wakes up, the display will resume normal operation and indicate the charging status.
	The remote control is too cold.	Allow the remote control to warm to room temperature, then plug in the charger.
	The remote control software is out of date.	Update the remote control software via the mobile app.
	An incorrect charger is being used.	Use the charger provided with the remote control.

11 Disposal



Recycling products with non-replaceable batteries, rechargeable batteries, or light sources:

- Dispose the product in accordance with all applicable regulations.
- The product can be disposed free of charge.

12 Warranty

Limited warranty available at qr.dometic.com/bfneEw.

If you have questions or to obtain a printed copy of the limited warranty free of charge, contact:

DOMETIC CORPORATION
 CUSTOMER SUPPORT CENTER
 5155 VERDANT DRIVE
 1-800-544-4881
 OR DOMETICCUSTOMERSERVICE@DOMETIC.COM

13 Technical data

Remote control	Description
Battery type	Lithium Ion/Li-ion
Battery rated capacity	1250 mAh
Power consumption rate	4.63 Wh
Input voltage	5 V, 2 A (USB-C)

Remote control	Description
Operating temperature	– 15°C ... 60°C
Charging temperature	0°C ... 60°C

14 Legal

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- This device may not cause interference.
- This device must accept any interference, including interference that may cause undesired operation of the device. This Class B digital apparatus complied with Canadian ICES-3(B)/NBM-3(B).

FCCID: 2AC7Z-ESPS3WROOM1

CID: 21098-ESPS3WROOM1



dometic.com

**YOUR LOCAL
DEALER**

dometic.com/dealer

**YOUR LOCAL
SUPPORT**

dometic.com/contact

**YOUR LOCAL
SALES OFFICE**

dometic.com/sales-offices
